




DRAWERS

- DRAWERS MUST FIT PROPERLY TO RUN PROPERLY. TOO LOOSE OR TOO TIGHT WILL CAUSE PROBLEMS. USE SILICONE SPRAY OR WAX ON WEARING SURFACES.
- CUT & FIT THE FRONT FIRST. TRY FOR A LIGHT PRESS FIT LEFT & RIGHT. THE BACK SHOULD BE CUT NEXT, TO THIS SAME LENGTH BUT 1" NARROWER.

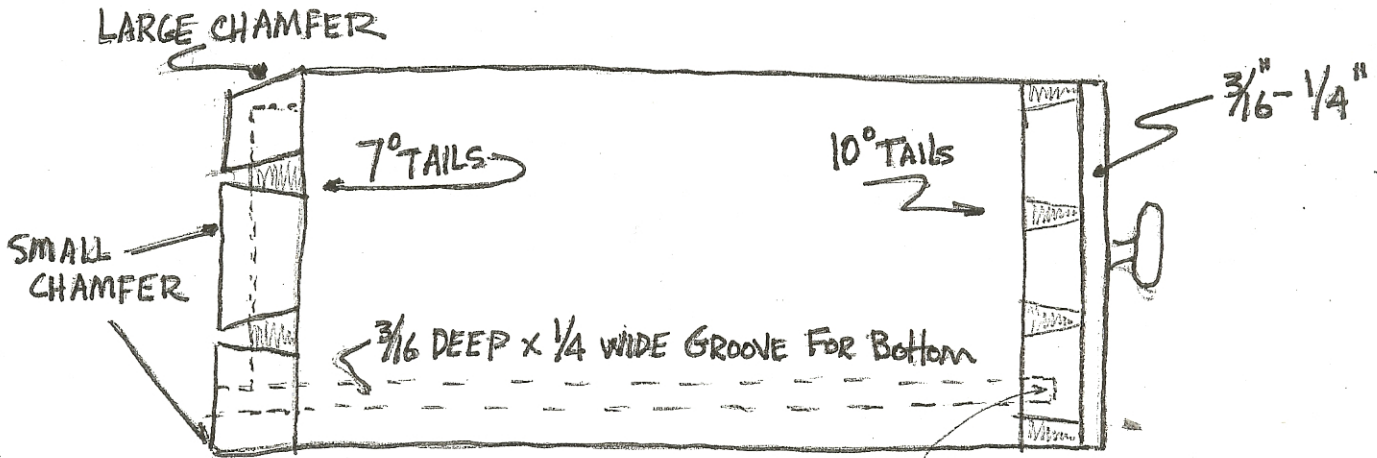

DRAWER BACK SET IN 1" FROM END. THIS 'CAPTURES' THE EXTRA DRAWER BOTTOM STICKING OUT THE REAR.

GROOVE MUST BE ENCLOSED IN THE TAIL SO IT DOESN'T SHOW IN THE DRAWER FRONT.

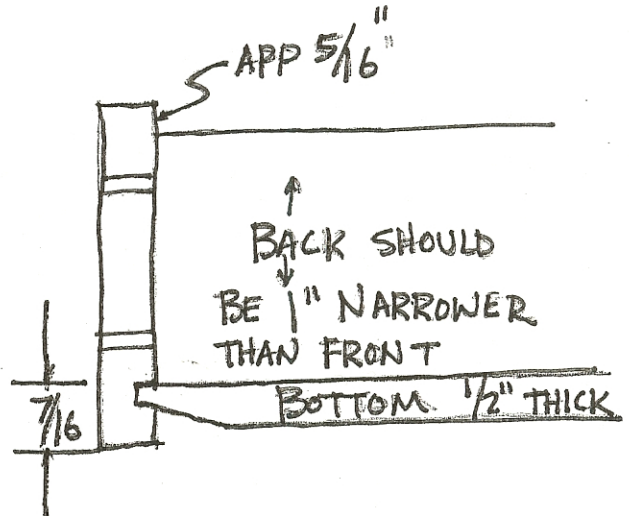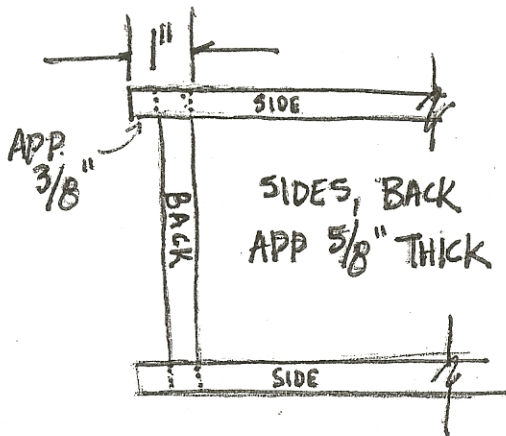

- SIDES SHOULD BE SAME WIDTH AS FRONT.
- Bottom is 1/2" THICK, BEVELED TO 1/4" ON 3 SIDES TO SLIDE INTO GROOVE. IT SHOULD EXTEND ALL THE WAY TO REAR OF THE DRAWER SIDE (APP 3/8" PAST THE BACK)